

ACCESS LOCAL PROGRAMMING

At this point you have completed the initial setup of the miALERT unit. The following will detail the programming section where the following miALERT settings are configured.

- Emergency Telephone Numbers.
- Room Numbers.
- Wireless Devices.
- Erase Programmed Wireless Device.

Fig. 1:



- 1) Press the reset button at the rear of the unit for 2 seconds and release (Shown in Fig 1). Next, press and hold the **flashing blue button** and hold until the unit asks for your access code. (Shown Fig.2)

Fig 2:



- 2) Lift the handset of the analog telephone connected to the miALERT unit and input ***1456** on the telephone keypad
NOTE: "*" is the star key on your telephone keypad

- 3) After entering the access code, the unit will prompt you to select “1” to continue in “English” or “2” for another language.
WARNING: By selecting a specific language, the unit will announce all prompts and emergency messages in the language specified.
- 4) You now have accessed the programming menu, please continue to the next sections; **Configure miALERT Settings**

CONFIGURING miALERT SETTINGS

This section will describe how to setup the miALERT unit using each of the main menu items:

- **Option 1:** Program emergency telephone numbers.
- **Option 2:** Program location information.
- **Option 3:** Program wireless device – pendants or pull cords.
- **Option 4:** Erase programmed wireless device.

Option 1. Program emergency telephone numbers:

- 1) Press “1” from the main menu to program a telephone number
- 2) Choose directory 1 to enter your first telephone number
 - a. To add additional numbers, select directory 2, followed by 3,4, and 5.
NOTE: You can program a maximum of 5 telephone numbers
- 3) Press “1” for **DS Mode** or “2” for **Voice mode**
 - a. **DS Mode** is used with our hosted server option and requires additional hardware and software to operate. Selecting this option without such additional hardware and software will render your miALERT unit inoperable.
 - b. **Voice Mode** is used when a direct link to a care provider is necessary.
- 4) Enter the telephone number followed by the “#” key.
- 5) Press “1” to re-enter the number or “0” to confirm the telephone number.
- 6) Press “0” to return to the main menu.
- 7) Press “0” again to exit programming.

Option 2. Program Location Information

The location information must be a numerical value 1 to4 digits in length and can represent the room or address the miALERT unit is installed in.

- 1) Press “2” from the main menu to program the room number.
- 2) Enter the room number followed by the “#” key.

- a. The “#” key is not required if the room number is 4 digits in length.
- b. The room number is a maximum of 4 digits and is usually the room the unit is installed in or the home address.
- 3) Press “1” to change or “0” to accept the room number
 - a. Option 1 allows you to re-enter the room number.
 - b. Selecting “0” will save the data and return to the main menu.
- 4) Press “0” again to exit programming.

Option 4. Program Wireless Device – Pendant or Pull Cord Pairing

The miALERT unit supports up to 8 wireless devices consisting of any combination of pendants, pull cords and RF (radio frequency) devices.

- 1) Press “3” from the main menu to access the wireless device programming section.
- 2) Select a device slot number 1 through 8.
- 3) Activate the wireless device (i.e. press the pendant button or pull the pull cord).
 - a. The unit will confirm the device has been programmed and return to the wireless device menu where another device can be programmed.
- 4) Press “0” to return to the main menu.
- 5) Press “0” again to exit programming.
- 6) The unit will begin configuration upload process.
- 7) After the unit begins beeping, press the emergency button to make the light solid (**Shown in Fig. 2**).

Erase a programmed wireless device

The process outlined in this section will permanently remove a wireless device from the unit.

- 1) Press “4” from the main menu to erase a wireless device.
- 2) Select a device number 1 through 8.
 - a. The unit will announce if the device number selected is in use and what type of wireless device it is.
- 3) Press “1” to return to the wireless device list or “2” to continue to erase this device.

- a. Option 1 allows you to return to the device list and select another wireless device.
- b. Option 2 will continue the process.
- 4) Press "2" to erase the next wireless device.
 - a. Option 2 gives you two choices.
 - i. Press "1" to change your selection. This will allow you one last chance to opt out of erasing the device.
 - ii. Press "0" to accept and erase the device
- 5) Press "0" to return to the main menu.
- 6) Press "0" again to exit programming.

Factory Reset to Default Setting

- 1) Press the reset button at the rear of the unit for 2 seconds and release (Shown in Fig 1). Afterward, press and hold the **flashing blue button** and hold until the unit asks for your access code. (Shown Fig.2)
- 2) Lift the handset of the analog telephone connected to the miALERT unit and input ***9473** on the telephone keypad.

NOTE: "*" is the star key on your telephone keypad.
- 3) When you hear "To continue in English press 1", the unit has been successfully reset to factory defaults.

Note: To confirm the unit has been factory the previous programmed wireless device will not alarm the A200 when pressed.

Emergency Call Acknowledgement Instructions

- 1) Emergency call is place by a resident.
- 2) Nurse's phone will ring after a few seconds.
 - a. Phone will display the information of where the emergency call has originated from.
- 3) Once you answer the phone, you will hear the details of the emergency call.
- 4) To acknowledge the emergency call press "#".

NOTE: This will activate A200 speakerphone to communicate with the resident.
- 5) To cancel the alert press "***" (twice).

Note: This will cancel the alert and hang up the phone.

*****IMPORTANT NOTE*****

Routine tests of all miALERT devices should be scheduled by staff responsible, to ensure that they deliver their full performance when called upon to do so.